

Monster Tower


TOWER BIMINI TOP MOUNTING INSTRUCTIONS

2018 MONSTER TOWER

HS -1

SMALL: 76" - 82" / 193-208cm
MEDIUM: 83" - 88" / 210-224cm
LARGE: 89" - 96" / 226-244cm

MTHS1 SM NN1-3T0AA
MTHS1 MEDNN1-3T0AA
MTHS1 LG NN1-3T0AA

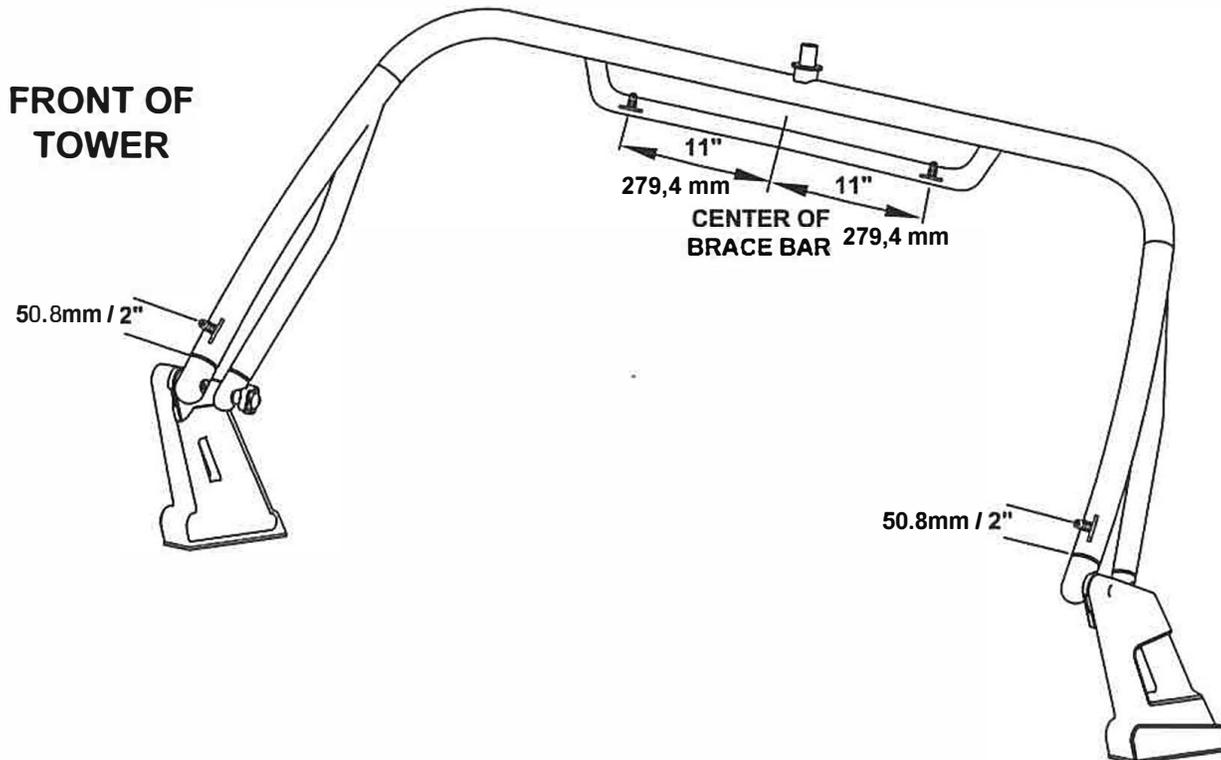

1) MEASURE 2" (50,8 mm) UP FROM WELD ON TOP SIDE FOR CENTER OF MAIN BOW MOUNT. PLACE MOUNT SO IT SWIVELS TOWARDS INSIDE OF BOAT. ATTACH WITH SELF TAPPING SCREWS.

2) MEASURE 11" (279,4mm) OUT FROM CENTER OF BRACE BAR FOR CENTER OF SUPPORT POLE MOUNT. PLACE MOUNT ON FRONT OF BAR SO THAT MOUNT SWIVELS DOWN. ATTACH WITH SELF TAPPING SCREWS.

HARDWARE PACKAGED



200614 - 4 - UNIVERSAL 90° SWIVEL MOUNTS

101180 - 4 - BLACK TWIST KNOBS

100391 - 8 - #8 X 1" PHIL FLAT TEK SCREWS

2018 MONSTER TOWER HS1 TOWER BIMINI TOP INSTALLATION AND OPERATION

ALL MOUNTING HARDWARE SHOULD BE INSTALLED PER MOUNTING HARDWARE INSTALLATION SHEET

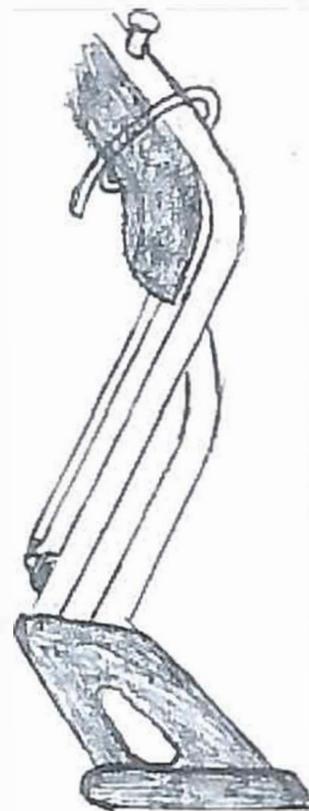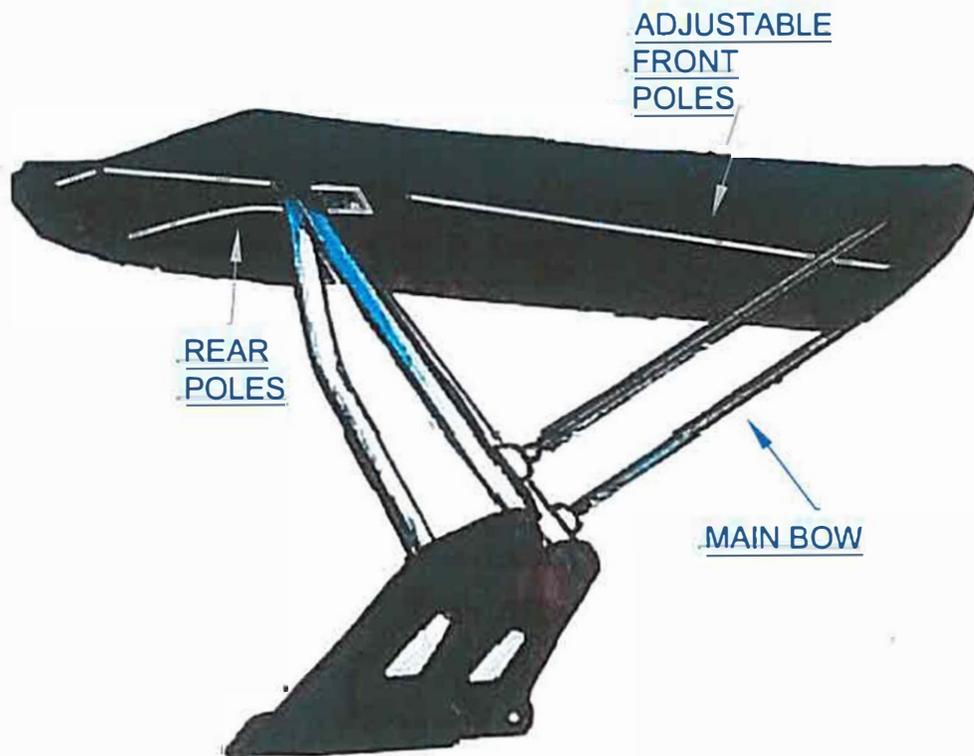

- 1) TAKE THE BOOTED TOP AND FIND THE MAIN BOW ENDS WITH PUSH BUTTON ADJUSTABLE LEGS. (LONGEST BOW). THIS IS THE MAIN BOW THAT WILL BE ATTACHED TO THE MOUNTS ON THE FRONT SIDE OF TOWER LEG.
- 2) PLACE THE BOOTED BIMINI ON TOP OF THE TOWER IN FRONT OF THE SKI TOW AND RESTING ON SPEAKER BAR. TOP CAN BE SECURED TO TOWER WITH STRAPS ON BOOT TO PREVENT IT FROM FALLING.
- 3) MAIN BOW LEGS SHOULD BE SET TO THEIR SHORTEST LENGTH WITH PUSH BUTTONS. PLACE EACH MAIN BOW EYE END INTO TOWER MOUNTS AND SECURE WITH SCREW THAT IS IN MOUNT.
- 4) REMOVE THE BIMINI TOP BOOT. PULL THE SECOND BOW (SHORTEST BOW) BACK OVER TOP OF TOWER. OPEN 33" ZIPPERED POCKET ALLOWING ACCESS TO REAR POLES. INSERT POLES APPROXIMATELY 1" INTO OPENING ON BACK SIDE OF LIGHT BAR. POSITION OPENING IN FABRIC AROUND SKI PYLON.
- 5) SWING MAIN BOW OUT AWAY FROM TOWER. EXTEND LEGS TO LONGEST LENGTH WITH PUSH BUTTONS.
- 6) OPEN 8" ZIPPERED POCKET ALLOWING ACCESS TO FRONT POLES. SWING POLES BACK TO MOUNTS ON FRONT OF TOWER. ATTACH WITH SCREWS IN MOUNTS.
- 7) LENGTH OF FRONT POLES CAN BE ADJUSTED WITH PUSH BUTTONS TO TENSION TOP PROPERLY.

TO STORE

REVERSE ABOVE STEPS.

ONCE STORAGE BOOT IS ZIPPED AROUND TOP FABRIC AND FRAMES MAKE SURE MAIN BOW IS AT ITS SHORTEST SETTING. FOLD TOP BACK AGAINST TOWER AND SECURE WITH STRAPS ON BOOT.