


Mounting instructions TurboSwing® & TowRescue® XXL, Giant, XXL Twin & Giant Twin

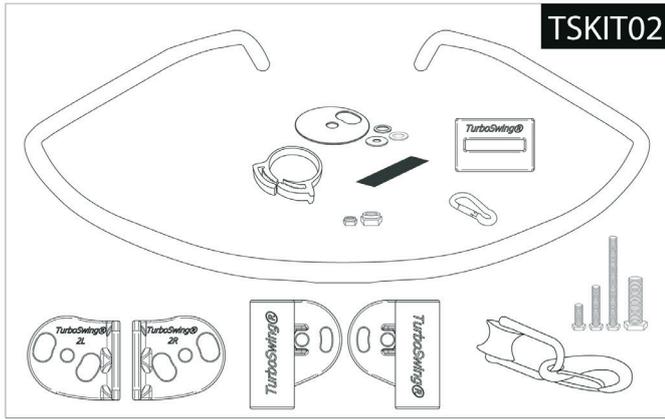

		2x		
		2x	2x M8	4x M12
2x m12 carros	2x	2x	2x M12x35	2x M8x25
2x M8x45	2x M12x120	4x	4x M12	2x M8

